



Fig. 14—Lubrication Diagram—Chevy Van

No.	Lubrication Points	Lubrication Period	Type of Lubrication	Quantity	Remarks
1	King Pins	6,000 Miles	Chassis Lubricant	4 places as required	
2	Tie Rod Ends	6,000 Miles	Chassis Lubricant	2 places as required	
3	Steering Connecting Rod	6,000 Miles	Chassis Lubricant	2 places as required	1 fitting at each end
4	Wheel Bearings	30,000 Miles	Whl. Brg. Lubricant	2 places as required	
5	Steering Gear	36,000 Miles	Chassis Lubricant	As required	Check—do not drain
6	Clutch Cross-Shaft	6,000 Miles	Chassis Lubricant	As required	
7	Brake and Clutch Pedals	6,000 Miles	Chassis Lubricant	As required	
8	Trans. Control Shift Housing	6,000 Miles	Chassis Lubricant	As required	
9	Air Cleaner—Oil Wetted Paper Element	12,000 Miles			Check—If satisfactory—Reuse element Recheck every 6,000 miles until replaced
	—Oil Bath	12,000 Miles	Engine Oil SAE 50 Above Freezing Engine Oil SAE 20 Below Freezing	As required	Check—Clean and refill when necessary
10	Distributor—L-6	12,000 Miles			1/2 turn of Cam* Lubricator
11	Transmission—Synchromesh —Automatic	6,000 Miles 6,000 Miles	Multi-Purpose AQ-ATF-A	As required As required	See Lubrication Section See Lubrication Section
12	Rear Axle	6,000 Miles	Multi-Purpose	As required	See Lubrication Section
13	Oil Filter	6,000 Miles or 6 Months			
14	Battery	6,000 Miles	Engine Oil		Oil Terminals and Felt Washers
15	Brake Master Cylinder	6,000 Miles	Brake Fluid Delco Supreme #11	As required	Check—Add fluid when necessary
16	Parking Brake Linkage	6,000 Miles	Chassis Lubricant		Lubricate Linkage, Pulleys and Cables

*Replace at 24,000 Mile Intervals